




## Self-adhesive Tie Mounts

### Overview


- ◆ Material: ABS、Nylon 66, 94V-2 ,certificated by UL, the back attached sponge glue imported .
- ◆ Usage: Peel the sponge glue and stick on the wall then, bundle the wire with cable ties.
- ◆ Application: for bundling wires and other things save time and convenient , used for the wall which can't be made a hole in.




Underwriters  
Laboratories Inc.  
File E 359184  
TYPE 21

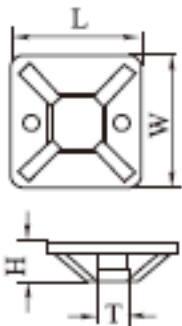

TM

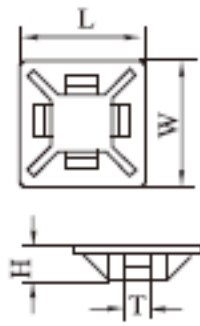

AAM-1

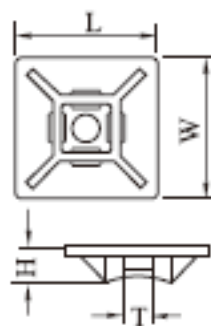

AAM-2

### Technical Parameters

编号 Item NO.	长×宽 (L×W) (mm)	高(H) (mm)	T (mm)	螺丝孔 Screw Hole(mm)
TM-20	20×20	6,1	5.0	2,9
TM-25	25×25	7,5	6,2	3,5
TM-30	30×30	8,7	6,4	4,5
TM-40	40×40	6,4	10,8	/
AAM-1	19×19	4,6	4,4	/
AAM-2	28×28	6,4	5,4	5,5